



Installation instructions for the Knitted Vacsoc® Kit by PLASTIFLEX

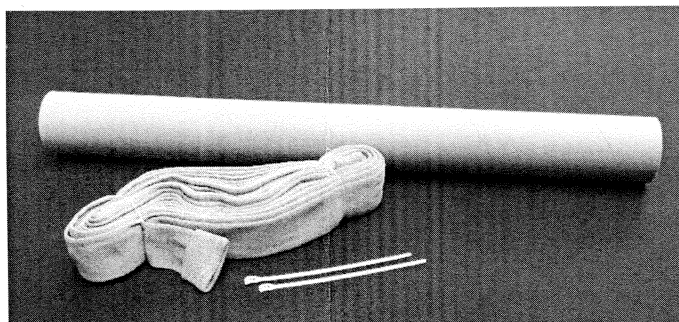


Vacsoc® Installation Kit

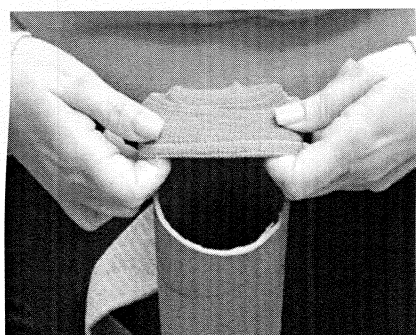


1. Place Vacsoc® on top edge of tube




2. Push in downward motion until the entire VacSoc® is on tube.

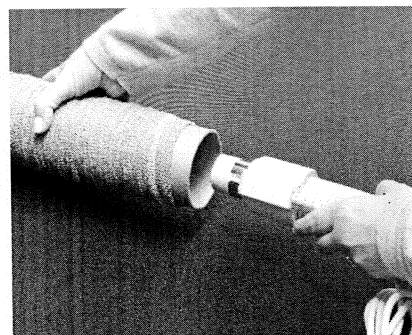


3. Insert the wall end of the hose

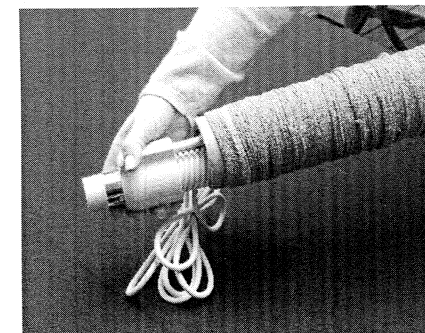


4. Pull vacuum hose through tube until...

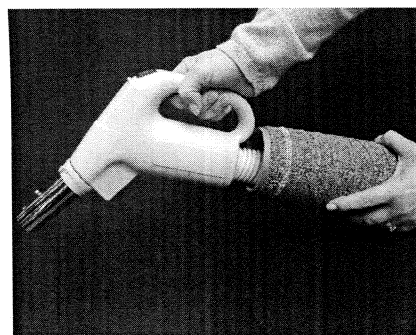


5. ...the edge of the tube is close to the bottom of the vacuum handle

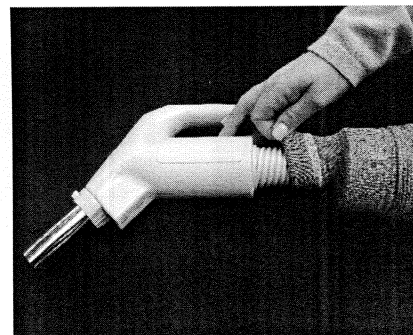

6. Pull Vacsoc® end from the tube until it touches the bottom of the vacuum handle

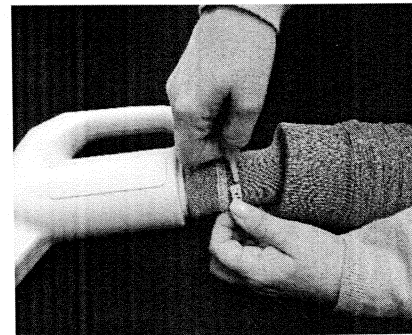


7. Secure the handle end of the Vacsoc® with the tie provided

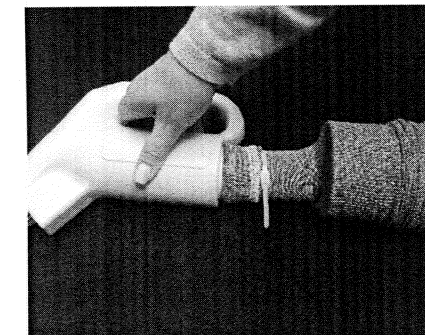


8. [Finished tie image]


Installation instructions for the Knitted Vacsoc® Kit by PLASTIFLEX

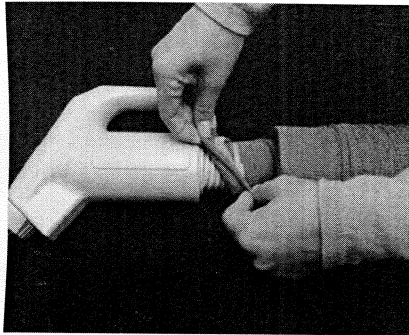


9. Fold back the finished cuff to conceal the Vacsoc® tie

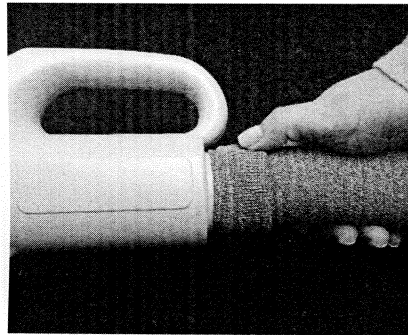


10. [Finished handle end image]

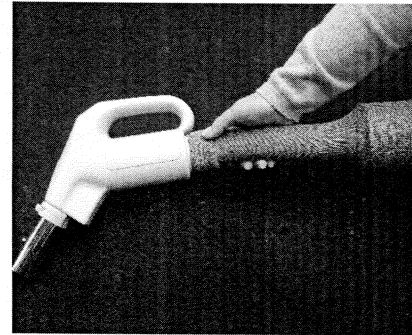


11. Firmly hold the handle and pull the tube away until you reach the wall end

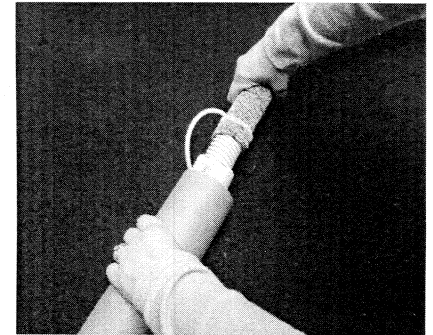


12. Remove the tube

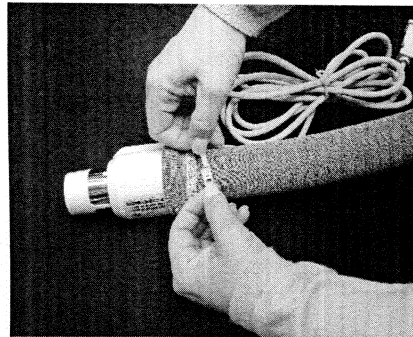

13. Secure the wall end of the Vacsoc® with the tie provided

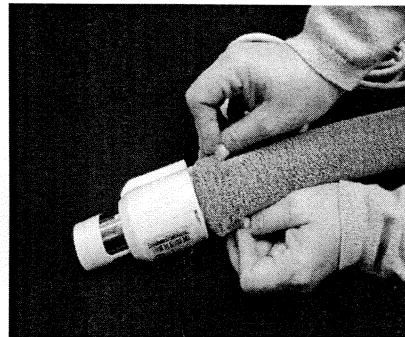

14. Fold back the finished cuff to conceal the Vacsoc® tie

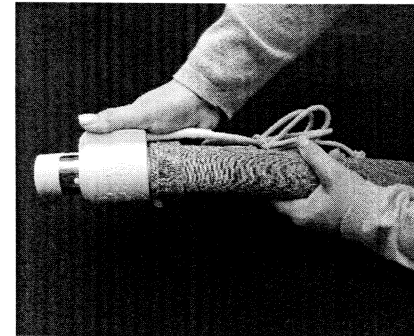

15. [Finished wall end image]

| | | |
|----------|---------|-------------------|
| REVISION | DATE | PLASTIFLEX |
| A | 5/15/15 | |